


Configuration list and installation drawing

Item No.	Picture	Accessories	Quantity
1		Motor	1pcs
2		Door buckle plate	1pcs
3		Door buckle box	1pcs
4		IC card	2pcs
5		Short screw	3pcs
6		Lithium battery	1pcs
7		USB charging cable	1pcs
8		Screw	2pcs
9		Installation stud	2pcs



Item No.	Picture	Accessories	Quantity	Remark
10		Square rod	1pcs	Door thickness: 40M-120CM
11		Key	2pcs	
12		Lock cylinder	1pcs	Screw for lock cylinder
13		Long screw	1pcs	

Cutting template

1. Please refer template carefully to drill hole
2. If there is a deviation in the hole, the lock body and panel assembly are put into the door and the hole is corrected until appropriate.

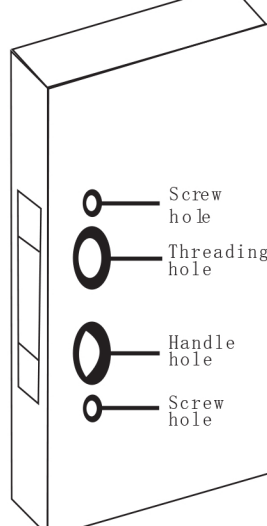

Install lock body & Strike Box

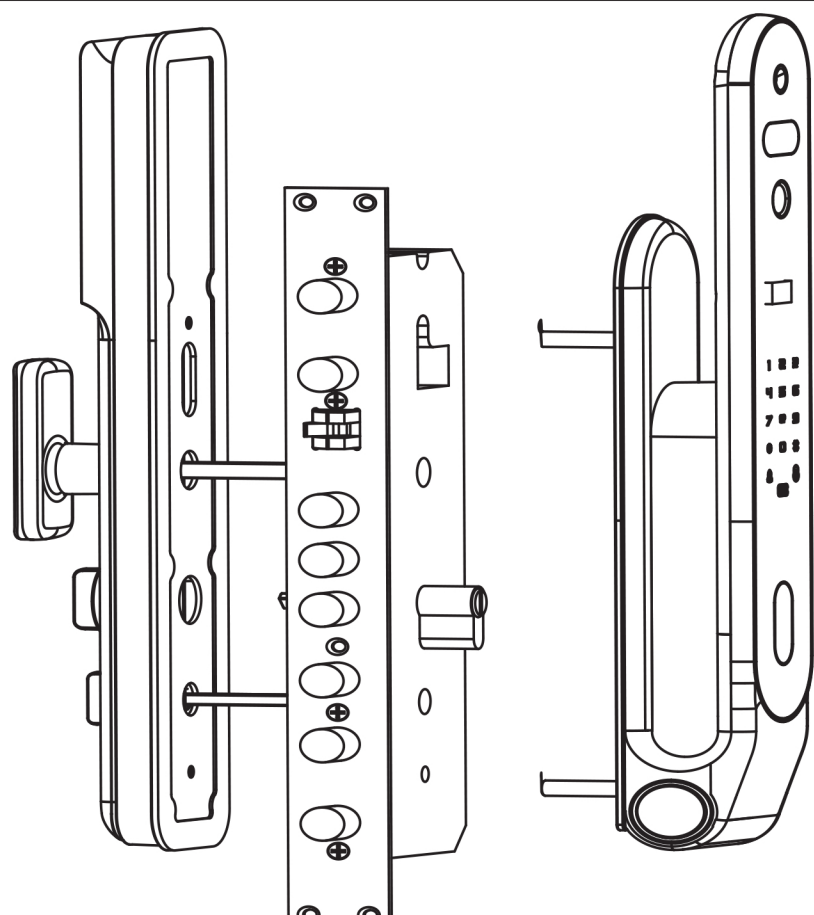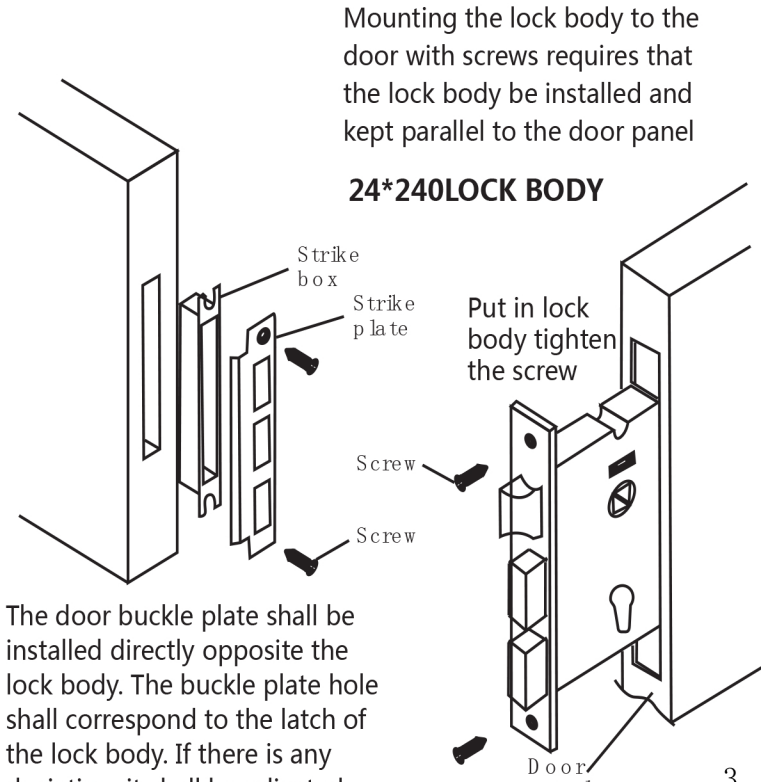

Dual latch install diagram

Remind

Product performance
Ideal for home, office indoor door lock
Suitable to 38-50mm thickness door



Determine the door direction

Stand outside of the door
Adjust the direction of the handle and latch bolt accordingly to the opening direction when installing the door.

Change lock body direction left and right

When installing the lock body, the latch bolt is on the upper side, the dead bolt under the latch bolt, and the inclined surface of the latch bolt is facing the opening direction.

1. Push the Detent up
2. Push the latch support column forward
It will push out the latch bolt
3. Rotate the latch bolt 180 degrees

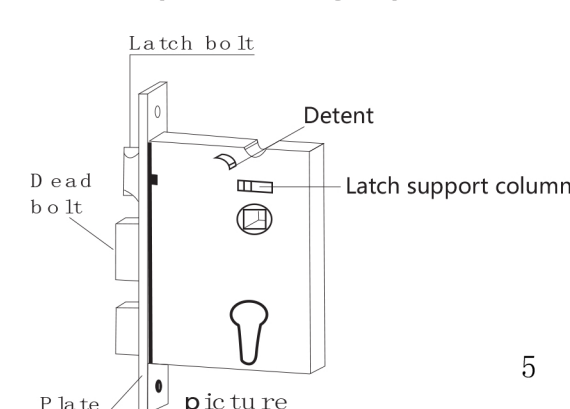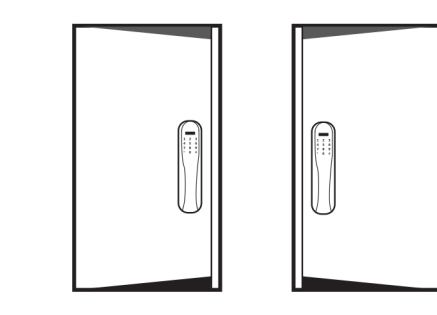

1、Introduction

In response to the security and modern management needs of residences, offices, and smart communities, we have launched a face + card + password door lock module. It adopts advanced fingerprint identification, non-contact card swiping and password as the key to open the door, and has a variety of door opening modes to choose from, which is more flexible, more convenient and safer!

door key type	quantity	number range	Remark
administrator	9	1-9	Number 1 is the management password, other administrator users can be face, card, password or fingerprint
general user	91	10-100	Ordinary users can be face, card, password or fingerprint

2、Function and operation

2-1: Initial state

The factory management password is "123456" to open the door;

Before use, you need to modify the management password to enter the menu function;

In the initial state, the human body sensor will be automatically turned on, and any face can be unlocked;

2-2: General rules of operation

For the first use, you need to add a set of management passwords, and the initialization verification password is "123456"

1. Add user
2. Delete user
3. Door lock settings
4. Add an administrator

1. Function setting
2. Volume adjustment
3. Language settings
4. More settings

Press

1. Function setting
2. Volume adjustment
3. Language settings
4. More settings

1. Turn on/off double verification
2. Turn off the tamper alarm/on
3. Sensing distance: 05
4. Turn on/off capture

Press

2-5: Door According to the actual use needs, select the corresponding number key to complete the settings: time setting, record query, initialization.


1. Function setting
2. Volume adjustment
3. Language settings
4. More settings

1. Time setting
2. Record query
3. Initialization


Press

2-3: To wake up the screen in normal state, press: * + #, enter the engineering password 123456 and press # to confirm, you need to set a new administrator password, after adding the new administrator password twice, the addition is successful, the original engineering password 123456 will be automatically deleted.


Directly enter the management system, and choose to add users/administrators according to your needs.

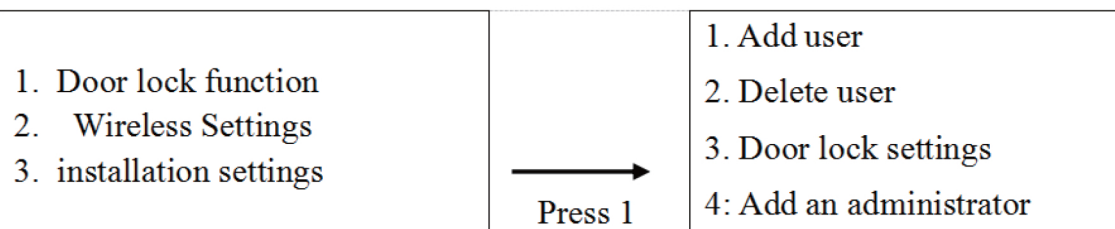

2-4: Door According to the actual use needs, select the corresponding number key to complete the settings: double verification, tamper switch, sensing distance, and snapping function.

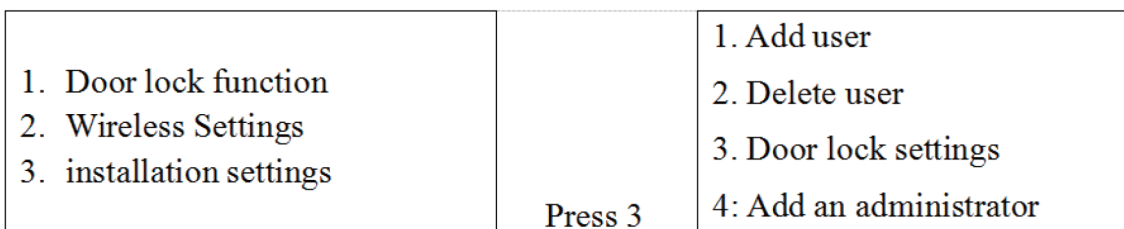

2-6: Door According to the actual use needs, select the corresponding number key to complete the setting: technical operations such as left and right directions.

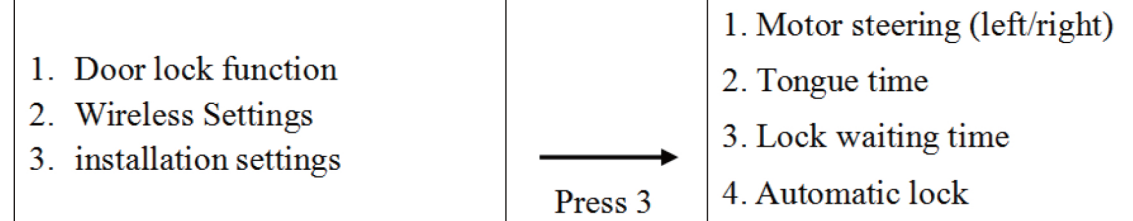

Note: The installation settings are normally used during installation and debugging, please operate with caution.

3、Initialization operation

Press and hold the unlock button and lock button on the rear panel at the same time for 5-8 seconds, and the voice prompts "Press [#] key for initialization operation", after pressing confirm, the inering password is 123456 to open the door;

4、Aging test mode

In the initial state, wake up the keyboard and press 999# to enter the automatic test mode, which is used for aging tests, etc. After entering the automatic test mode, the door lock will automatically unlock and automatically lock in a cycle.

5、other instructions

*If the wrong password is entered more than 5 times within five minutes, the keyboard will be locked for 90s, and the system will not respond to any operation within 90s, which can be unlocked by entering the administrator through the setting button on the rear panel.

Instructions for SmartiQo APP operation Downloading Method

- Download method 1:** You can search " SmartiQo " in App Store or Android app stores to download and install.
Download method 2: Scan the QR code below to download Doodle Smart

Connection Operations

Open the back cover, press the reset button (note that it is not a long press), hear a beep, listen to the voice instructions, enter the administrator password, and press # to confirm;

Operations on the APP

Open the mobile APP , first register an account, and then follow the steps below,

- ①To add a device, click "Add Device _ Camera/lock _ Smart lock (WiFi)";
 - ②Select the name of WIFI, enter the password of WIFI, and click "Next";
 - ③Reset WIFI in the menu of the lock plate system, and click "Confirm keyboard light flash" on the APP terminal after confirming the completion;
 - ④Select "EZ mode";
 - ⑤until the WIFI connection is successful. Normally, the operation can be successful in about 20 to 40 seconds.
- Try to connect the WIFI connection to a place with good network environment.



APP functions

- Function 1:** Use the doorbell and upload information to the APP to ask for unlocking
Function 2: Upload user unlock information logs

*Press "99#" to announce the current time by voice

*In the initial state, press "888#" to quickly enter the installation setting menu, which is compatible with the operation mode of the old version, and it is convenient to adjust the direction of the motor

6、Technical Parameters

power supply	7.4V lithium battery
Typical Quiescent Current	<70uA
The number of faces that open the door	<=50 groups (2-100 number users)
The number of fingerprints to open the door	<=99 groups (2-100 number users)
Number of door openers	<=100 groups (2-100 number users)
Number of passwords to open the door	<=100 groups (administrator No. 1, users No. 2-100)
Image Sensor	1/4" CMOS, 1280x800 pixels
Lens	84.2° field of view, focusing distance 50cm (35.5-84.7cm), <1.5% distortion rate
fast unlock time	<=2 seconds
face recognition distance	0.3-1 meter
Operating temperature:	-10℃ ~60℃
Relative humidity:	20% ~ 93%

7、Network settings (Tuya WIFI)

After successfully verifying the administrator information, enter the door lock function management, press the button to select 1, and enter the paired wireless device interface to perform network operations.

